

**Home Status**

**Navigation Icons**

- Back:** Moves back one screen.
- Scroll Up:** More options available above.
- Scroll Down:** More options available below.



**Text Entry Box**

- Character Selection:** Selects between upper/lower case letters and numerals/symbols.
- Backspace:** Deletes the last character input.
- Clear:** Deletes all of the data in the text box.
- Enter:** Saves the data entered.
- Cancel:** Exits without saving.
- Restore Default:** Returns to original settings.

**User Role Icon Key**

The User Role icon indicates the current level of access. This icon is used in this guide to indicate the access level needed to perform certain functions.

- Guest Guest level access
- User User level access
- Admin Administrator level access

**Note:** Pressing the User Role icon will return the current access level to Guest.

**Alarm Status LEDs & Annunciator**

- ALARM** Red Alarm LED – Flashes with Tank, Sensor and Line alarms.
- WARNING** Yellow Warning LED – Flashes with Active System Warnings.
- POWER** Green Power LED – On when power is applied to the console.

**Note:** Alarms automatically clear when the conditions that caused them are corrected. Indicator lights will stop flashing when there are no alarms.

**View Active Alarms**

Press to view all Active alarms.

**Note:** Pressing this button will display active alarms only. When the Alarm Condition button is a Checkmark, there are no active alarms.

**Clear Active Alarms**

A certified technician can help diagnose alarm issues that might come up, so it's a good idea to have your Service Company's information close at hand.

Name	Number
	( ) -
	( ) -


**Note:** Alarms cannot be cleared manually. Alarms will clear automatically when the condition that created the alarm has been corrected.

**To Display...**


- Gross Volume
- Gross Level
- Product Temperature
- Net Volume
- Water Volume
- Water Level

**By Tank or Manifold**

- Press the FMS button. *Up to 6 tanks with gross volume are displayed.*
- Press to display more tanks, if applicable.
- Press the Tank that you want details on (gross level, product temperature, etc.).

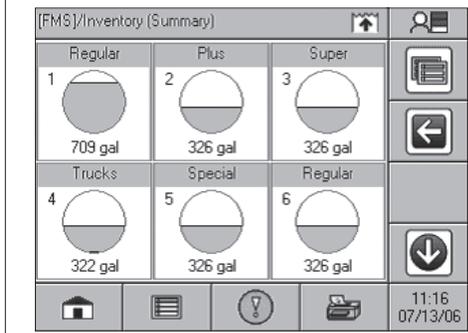

**Inventory Summary**

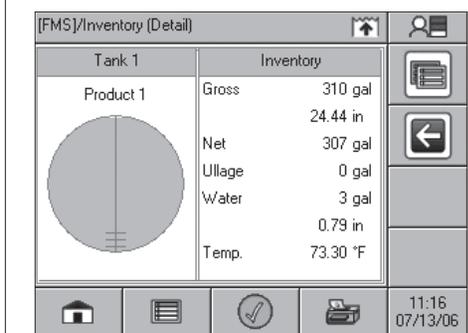

**Inventory Details**

**Note:** Pressing the Print button while viewing Inventory Summary will print an inventory report for all tanks.




## To Enter a Password

When trying to perform an operation that requires a higher access level than you currently have, you will be prompted for a password. When you're asked for a password, enter in the necessary information using the buttons shown under the Navigation Icons header. Press the **Enter** button after you have finished entering in your password.

## To Set Time & Date

Press  18:19 06/19/06 to open the Date/Time options.

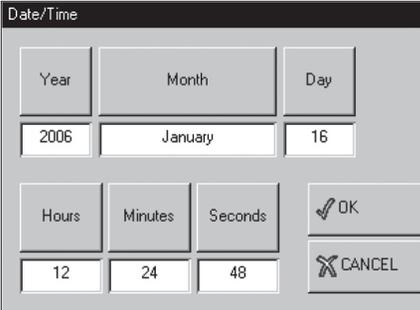


Press **OK** to confirm your changes.

## To Print Reports

In order to print reports, you must have an optional internal or external printer.

Press  the Reports button.

Then select the type of report and the time period the report represents. An example of the Reports screen is shown below.

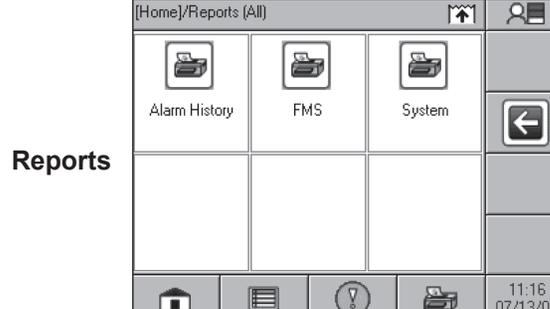

Press   to advance the paper feed.


## To Force a Tank or Line Leak Test

Press  the FMS button. Tanks are displayed here.


Press  the Application Menu button.

Press  the Control button.

Press  or  the Tanks or Lines button.

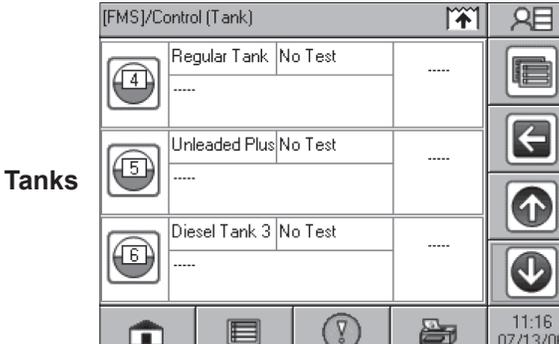

Press  the Tank or Line to be tested (or the Down button if applicable).

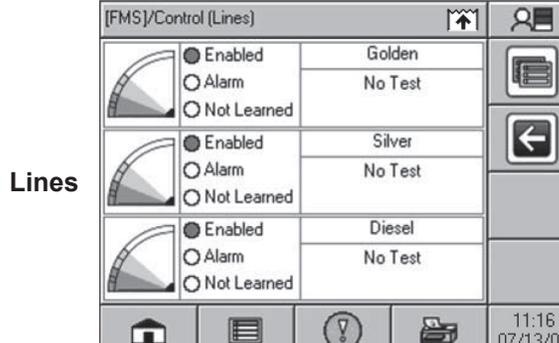

### For Tanks

Press  Monthly

- or -

Press  Annual

### For Lines

Press  Force Gross Leak Test

- or -


Press  Force Monthly Leak Test

- or -


Press  Force Annual Leak Test

## View Alarm History

Press  the Main Menu button.

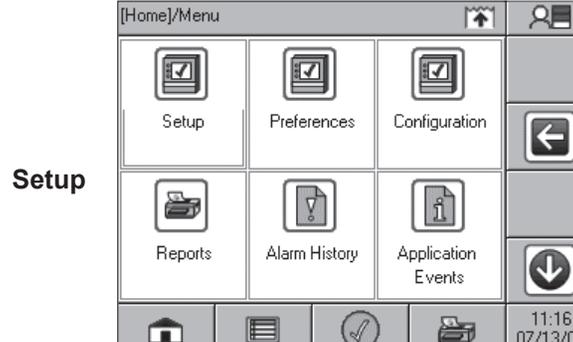

Press  the Alarm History button.

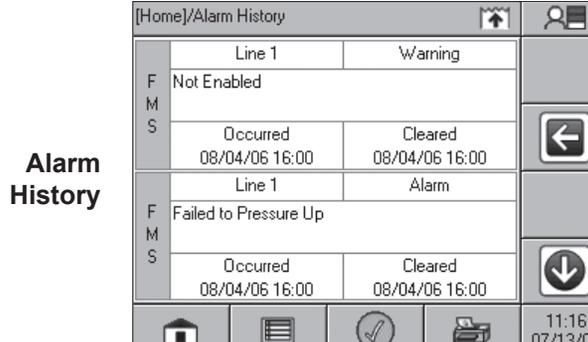

[Home]/Alarm History	
Line 1	Warning
FMS	Not Enabled
Occurred	Cleared
08/04/06 16:00	08/04/06 16:00
Line 1	Alarm
FMS	Failed to Pressure Up
Occurred	Cleared
08/04/06 16:00	08/04/06 16:00